

Firmware Update Instructions for: M1003Z, M1203Z, M1503Z

Please follow the steps below to update the firmware on your M1003Z, M1203Z, and M1503Z digital photo frame.

WARNING: The photo frame models listed in this tutorial use different firmware - do not use the firmware for one model to flash a different model. This will result in permanent damage to the photo frame beyond repair and is not covered by warranty.

1. Prepare an empty SD card that is 32GB or smaller. Do not use a USB drive.
2. Download the appropriate firmware ZIP file from www.miccatron.com. Do not use the firmware for a different model number.
3. Extract the ZIP file and copy the AMAMUPUP.bin file to an empty SD card. Do not use a USB drive.
4. Insert the SD card into the photo frame and turn on the photo frame.
5. Navigate to the Settings menu, then select System Setup → System Upgrade → Yes
6. The photo frame will now display a firmware update progress bar. DO NOT TURN OFF THE PHOTO FRAME OR OTHERWISE DISTURB THE UPGRADE PROGRESS
7. When finished, the photo frame will restart and display the main menu.
8. Turn off the photo frame, remove the SD card, and delete the AMAMUPUP.bin file from the SD card.